

Oeuf Changing Station

model #CS001

WARNING

FALL HAZARD - To prevent death or serious injury, always keep child within arm's reach.

- Read all instructions before use of changing station.

KEEP INSTRUCTIONS FOR FUTURE USE.

-Use only the pad provided by the manufacturer.

- Before each usage or assembly, inspect changing station for damaged hardware, loose joints, missing parts, or sharp edges. **DO NOT** use changing station if any parts are missing or broken. Ask your dealer or write to OEUF for replacement parts and instructional literature if needed. **DO NOT** substitute parts.

-Upon completion of assembly, be sure all screws and bolts have been tightened securely. A periodic check should be made of all screws and bolts and retighten if necessary.

Manufactured for:
Oeuf LLC
119 8th Street, Suite #301
Brooklyn, NY 11215 USA
(800) 691-8810
email: help@oeufnyc.com
www.oeufnyc.com

Distributed in Canada by:
5514 KM Corporation
19 Industrial Street, Toronto
ON M4G 1Z2 CANADA
(800) 502-5514
email: info@5514km.ca
www.5514km.ca


Distributed in Australia by:
3 Feet High Pty Ltd.
78-80 Commonwealth St., Surry Hills
NSW 2010 AUSTRALIA
Ph 61-2-9281-0886
Fax 61-2-9281-0644
www.3feethigh.com.au

oeuf[®]

⚠ WARNING


DO NOT ATTACH RAILS (PARTS #10) WHEN USING THE STATION ON TOP OF A DRESSER! RAILS ARE ONLY TO BE USED WHEN PLACED ON TOP OF A CRIB

PLEASE FOLLOW ALL INSTRUCTIONS



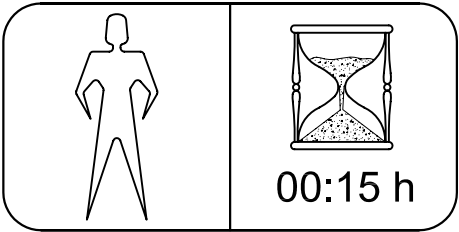


Parts List

Liste des Pièces

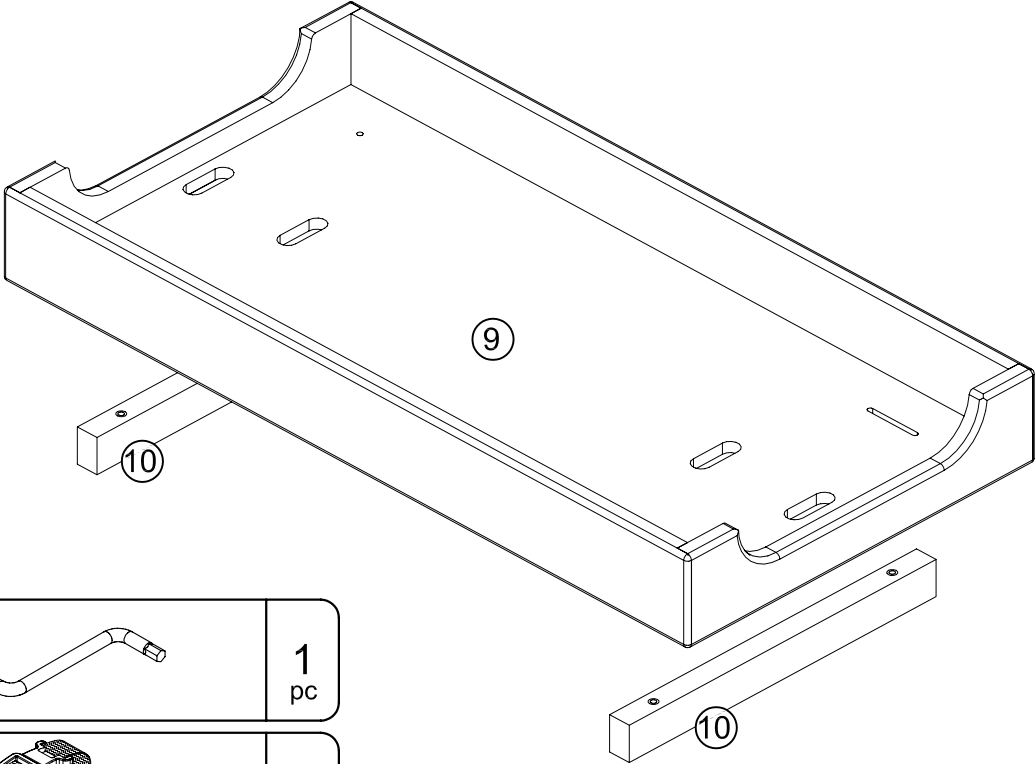

F		1 pc
J		2 pcs
K		4 pcs M6x20
L		4 pcs rubber bumpers

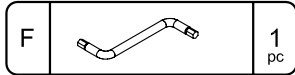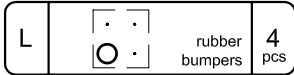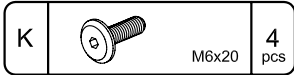

1

Attach the first rail to bottom of changer using screws (K). Tighten screws.

Attach the second rail to bottom of changer using screws (K). DO NOT tighten screws.

Place changing station on top of the crib so that the 1st RAIL is against the inside of the crib side. Using the elongated holes, adjust the 2nd rail so it is against the opposite crib side and the two rails create a tight fit between the inside of the two crib sides. (see Fig. A)

TIGHTEN SCREWS ON 2nd RAIL

CHECK TO BE SURE THERE IS LITTLE OR NO MOVEMENT BY ATTEMPTING TO MOVE THE CHANGER BACK AND FORTH.




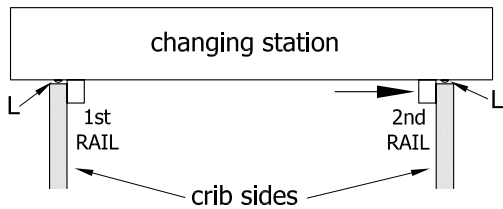


Fig. A (view from side)

Apply rubber bumpers (L) to bottom of changing station at the points of contact with crib sides.

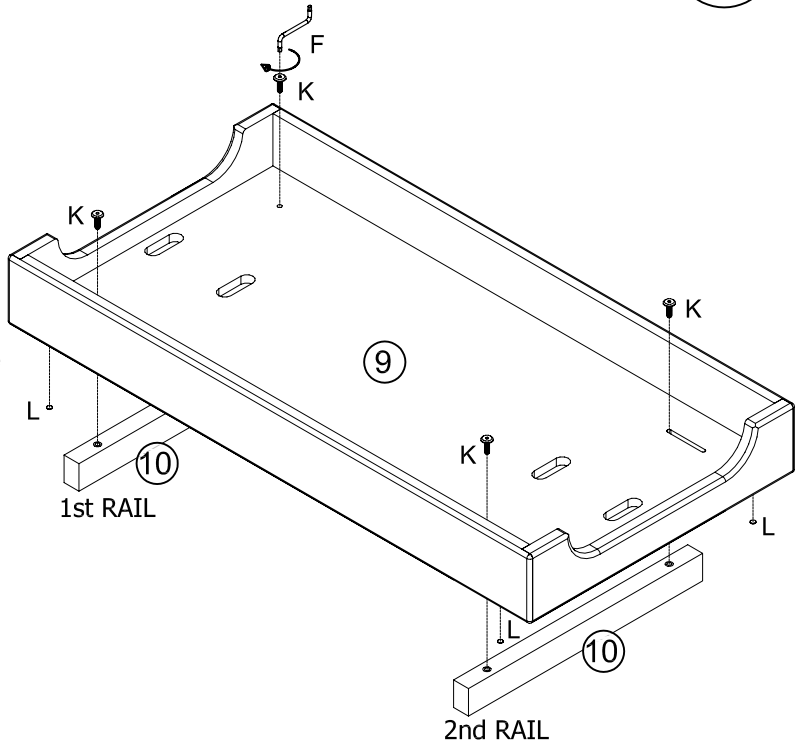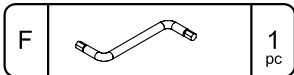


2

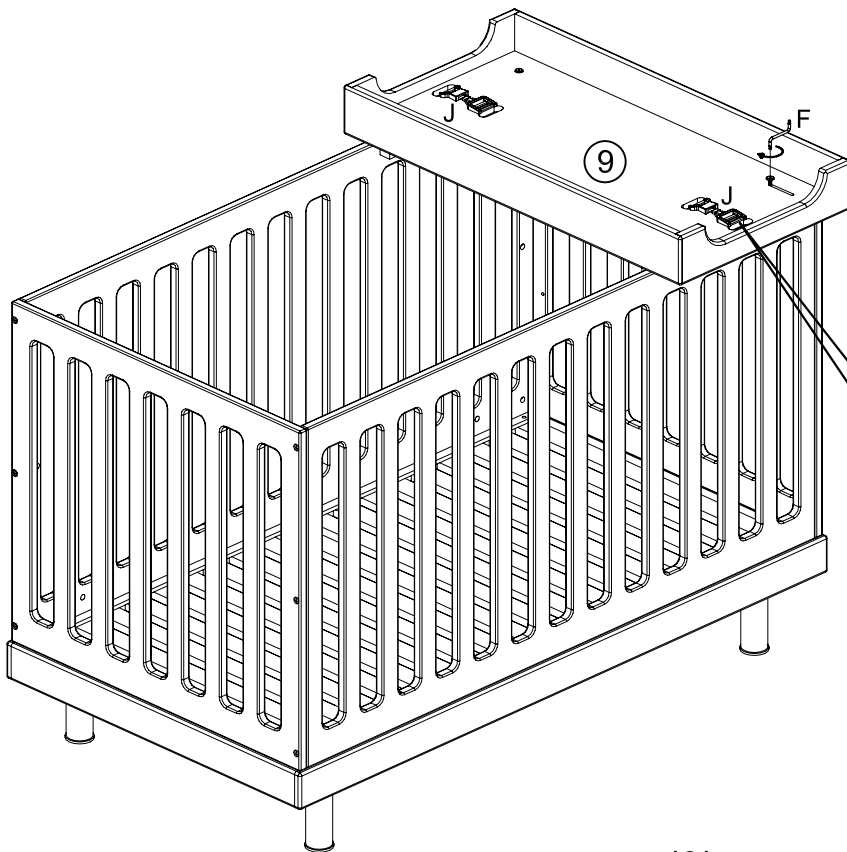

Wrap the safety strap around the rail of the crib with both ends coming through the holes in the bottom of the changer.

Clasp (J) at both ends to the crib, you should hear it click.

Tighten both safety straps by pulling on the loose ends of the belts.

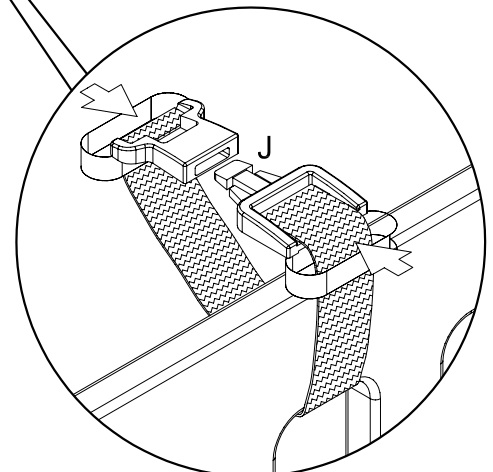

(3)

Check that the changing station is securely attached to the crib by pulling up, and back and forth.

Closely follow instructions provided with changing pad for proper use.

FALL HAZARD - To prevent death or serious injury, always keep child within arm's reach.

