

**UPPAbaby**  
www.uppababy.com®

**VISTA**

Instruction Manual : 2010

# TABLE OF CONTENTS / TABLA de CONTENIDO / TABLE des MATIERES

Please read these instructions carefully prior to assembly and use / Por favor lea atentamente estas instrucciones antes del armado y del uso / S'il vous plait lire les instructions attentivement avant l'assemblage et l'utilisation

## English

Page 1	Warnings + Safety Information	Page 7	Bassinet Assembly
Page 3	Stroller Parts List	Page 10	Stroller Operation
Page 4	Stroller Assembly	Page 17	Limited Warranty

## Spanish

Página 18	Advertencias e Información de Seguridad	Página 24	Armado del Moisés
Página 20	Lista de Piezas de la Carriola	Página 27	Operación de la Carriola
Página 21	Armado de la Carriola	Página 34	Garantía Limitada

## French

Page 35	Mises en garde + informations de sécurité	Page 41	Assemblage du Landau
Page 37	Liste des Pièces de la Poussette	Page 44	Fonctionnement de la Poussette
Page 38	Assemblage de la Poussette	Page 51	Garantie Limitée

## WARNINGS + GENERAL SAFETY INFORMATION

**⚠️ WARNING:** **AVOID SERIOUS INJURY** FROM FALLING OR SLIDING OUT- ALWAYS USE THE SEAT HARNESS. **NEVER LEAVE CHILD UNATTENDED!** KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### STROLLER WARNINGS:

*Please read this manual carefully before using this stroller. Failure to follow instructions properly may result in serious injury to your child.*

- This stroller is suitable for children from birth until child is 50 lbs (18.1 kg), and child height is 40" (101 cm).
- Unit may become unstable if the manufacturer's recommended load is exceeded, or if a parcel bag or rack other than that recommended by the manufacturer is used.
- Maximum capacity for seat pocket 1 lb.
- Maximum weight for the storage bag is 5 lbs.
- This stroller is intended to be used with one child only, unless equipped with UPPAbaby accessories.
- Never leave your child unsupervised in the stroller.
- The brake must be locked while taking the child in or out of the stroller, and when parked.
- Bumper bar must be attached at all times.
- Canopy must be attached at all times.
- The child should be clear of moving parts while making stroller adjustments. Damage to fingers or extremities may occur when opening or closing the stroller frame.
- Never leave child in the stroller while ascending or descending stairs, or using an escalator.
- Check to be sure the seat is securely locked to the stroller frame before each use.
- Do not make any alterations or modifications to the stroller with products not supplied by the manufacturer as this may cause instability or structural damage not covered under warranty.

### BASSINET ATTACHMENT WARNINGS:

*Failure to follow these warnings and instructions could result in serious injury or death:*

- Audible "click" must be heard in order to determine that each lock is in the proper position. To ensure proper locking engagement, check to see that the bassinet/carry handle cannot be disengaged from the stroller without unlocking the device.
- Bassinet attaches **ONLY** in the rear-facing direction, so infant is facing the user.
- Bassinet must be removed to fold stroller.
- Maximum child weight 20 lbs (9 kg).
- Maximum child length 25" (63 cm).

### WARNING: STRANGULATION/SUFFOCATION HAZARD:

- Strings can cause strangulation! Do not place items with strings around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a bassinet or cradle or attach strings to toys.
- Infants can suffocate!\*
- **NEVER** add a mattress, pillow, comforter or padding. **ONLY** use the mattress pad provided by the manufacturer. Infants can suffocate in gaps between an extra pad and side of bassinet, or on soft bedding.
- **NEVER** place carrier on beds, sofas, or other soft surfaces. Infant carrier can roll over on soft surfaces and suffocate child.

\*To reduce the risk of SIDS Pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by Physician.

CONT'D. NEXT PAGE>

# WARNINGS + GENERAL MAINTENANCE



## WARNINGS CONTINUED FROM PREVIOUS PAGE:

### BASSINET FALL HAZARD:

- To prevent falls, do not use this product when the infant begins to push up on hands and knees or has reached manufacturer's recommended maximum weight, whichever comes first.
- The bassinet is suitable only for babies not yet able to sit up on their own.
- Child's movement can slide carrier. NEVER place carrier near edges of counter tops, tables, or other elevated surfaces.
- NEVER use the bassinet carrier as a means to transport an infant in a motor vehicle.
- NEVER leave child in carrier when straps are loose or undone.
- To avoid serious injury or death to your child, do not use this bassinet as a car bed.
- Use of bassinet cover is recommended for added safety of your child. See page 8 for installation instructions.
- The bassinet should only be placed on a low, dry, firm horizontal surface.
- Do not permit other children to play unsupervised next to the bassinet.
- Open flames and other sources of heat, such as electric heaters, gas ovens, etc. in the immediate vicinity of the bassinet are dangerous and should be avoided.
- This bassinet is only designed to be used with the VISTA stroller frame and the VISTA Bassinet Stand.
- Do not use the infant carrier if it is damaged or broken.

### CLEANING + GENERAL MAINTENANCE:

#### FRAME AND FABRIC CARE:

- Clean frame with a damp cloth and a mild detergent and dry thoroughly. Do not use abrasives.
- If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed with fresh (tap) water as soon as possible to avoid corrosion. Always dry frame if wet.

- All fabrics are removable except the outer bassinet base.
- Remove shoulder harness straps with microsuede harness pads before washing seat fabric.
- For removable fabrics, hand wash in cold water with mild detergent. Air dry completely and away from direct sunlight before re-use or storage.
- The bassinet base fabric may be sponged lightly using a damp cloth and a mild detergent. Allow it to dry completely before re-use or storage.
- To extend the life of your VISTA's fabric, keep it clean and do not leave it in direct sunlight for long periods of time.
- Do not fold or store the VISTA if it is damp or wet, nor store in a damp environment.

#### MAINTENANCE AND REPAIR:

- This stroller requires regular user maintenance. Regularly check all connecting hardware (rivets, screws, etc.) for tightness and security.
- Inspect your VISTA periodically. Seek prompt repairs, replacing worn or broken parts as needed. Check all safety devices, locks and harnesses, for correct and secure operation. Never continue to use a product that is structurally unsound.
- Only UPPAbaby replacement parts should be used. It may be unsafe to use parts supplied by another manufacturer.
- Contact Customer Service with any repair questions.

*UPPAbaby reserves the right to make design changes and improvements to any of our products as part of our commitment to innovation.*

# VISTA PARTS LIST



- 1) Bassinet Bug Shield
- 2) Stroller Seat Bug Shield
- 3) Stroller Seat Rain Shield

## STROLLER ASSEMBLY

### Step 1 : Unfold stroller

- 1a) Pull the handle upward until the frame locks as shown.



### Step 2 : Install wheels

- 2a) To install the back wheel: while pressing in the hubcap of the wheel, slide the wheel into the axle until it locks into place.



To remove the back wheel: push the hubcap in and slide the wheel out.

## Step 2 cont'd.

2b) To insert the front wheels: slide each front wheel into the shaft until it locks.



To remove the front wheels: turn the plastic knob in the direction shown and slide wheel off.

## Step 3 : Attach the seat

3a) To attach seat: lower the seat onto the frame and press down until it clicks into place. Pull up on seat to be sure it is locked to the frame.



3b) To remove seat: (arrow 1) push down both security buttons and (arrow 2) lift the seat from the frame.

**NOTE:** *Seat can attach in either forward or rear-facing directions.*

## Step 4 : Attach the bumper bar

- 4a) **WARNING: Bumper bar must be attached at all times!** Slide metal post into slot on both sides.



To remove the bumper bar from the stroller, press button at bottom of plastic housing and lift bumper bar.

## Step 5 : Attach the canopy

- 5a) Snap plastic canopy tabs into slots on sides of seat just above the attachment mechanism. Push canopy bars forward.




Pull canopy fabric back and attach Velcro to top of the seat.

## BASSINET ASSEMBLY

### Step 1 : Unfold the Bassinet

- 1a) Lift the sides of the bassinet and push both steel braces firmly into their respective sockets.

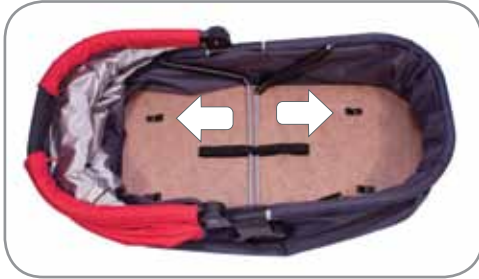

Make sure that both braces are properly locked in place.

### Step 2 : Install liner

- 2a) Place the liner in the bassinet. Pull one end of the liner over the bottom of the bassinet, then stretch the liner evenly over the sides.



Fasten the liner to the sides with the Velcro strips.

### Step 3 : Install mattress

3a) Place the mattress in the bassinet.



### Step 4 : Attach cover

4a) Feed the closed end of the cover over the bottom of the bassinet, and pull the cover toward the front of the bassinet.



4b) Fasten the ends of the bassinet cover to the outside of the canopy with the Velcro strips.

## Step 5 : Attach Bassinet to stroller

**NOTE:** Bassinet attaches only in the rear-facing direction, so infant is facing the user.

5a) Insert the posts on the sides of bassinet into the slots on the frame. Push until you hear it “click” on both sides.



5b) Check carefully that the bassinet is attached to the frame properly by pulling up on the bassinet carry handle.

To remove the bassinet:

5c) Lift rear lever firmly and completely (90 degrees).



5d) Lift bassinet off of frame using carrying handle.

**NOTE:** Bassinet must be removed from stroller to fold.

## STROLLER OPERATION

### Set swivel/locking system

To lock wheel swivel: slide the button down to lock. Lock wheel swivel if traveling through rough terrain or sand.



To unlock: slide button up.

### Setting the brake

To lock the brake: Brake is located on the right rear wheel. Push down on the pedal with foot to lock.



To release brake: push the pedal down again.

## Adjusting seat harness

Detach silver adjustment clip from upper or lower harness attachment loop. (Remove microsuede harness pad if necessary to facilitate harness adjustment).



Reattach clip to the desired harness loop. Use loop location above child's shoulder line, or closest to child's shoulder.

## Locking/unlocking harness

To lock: slide both belt ends together until it locks.

To open: depress button at center and pull apart.



***WARNING: Use the 5-point harness to restrain the child while in the stroller at all times. Adjust harness to fit child securely.***

## Tilting the Seat

Pull the lever near the top of the seat and tilt seat to desired position. Release the lever to lock in one of four preset positions.



*NOTE: Do not use upright position for infants less than six months old. Use the most reclined position and gradually re-position the seat more upright as the child is able to support its head without assistance. Always re-adjust harness after changing positions.*

## Adjusting handle height + leg rest

To adjust handle: push the button at the top and slide handle to one of three handle positions suited to user height + comfort.



To adjust leg rest: push both buttons (left and right side of the leg rest). Rotate leg rest to one of 5 pre-set positions.

## Folding the Stroller

*NOTE: When folding frame with seat attached, seat must be in forward facing and upright position.*



1) **Push and hold** black plastic tab in with left thumb, **AND** squeeze the handle height adjustment button with your right hand.



2) Push the handle in towards the stroller quickly and firmly until it hits the stop. This will release the locking mechanism.



3) The frame will open at the middle and begin to collapse. Once that happens, remove your left thumb from the button, using only right hand on the handle to continue to fold.



4) Finish collapsing, allowing front wheels to nest all the way into the frame.  
5) Lock stroller:



Also see: <http://www.uppababy.com> click Video, choose VISTA Stroller

## Correct attachment for rain shield + bug shield



Proper installation  
of rain shield



Proper installation  
of bug shield



Proper installation  
of Bassinet bug shield

## Removing fabrics from seat

a) Unfasten Velcro from lower foot rest.



b) Disconnect straps on side of seat that are wrapped around seat frame.



c) Release strap on the underside of seat and slide fabric over and off of the top of seat frame. Reverse process when putting fabric back on seat frame.



*NOTE: Please see Care Instructions (page 2) regarding fabric care.*

## Removing fabrics from Bassinet

- a) Remove liner by pulling elastic up and over sides of bassinet. Release side Velcro strips.



- b) Unzip canopy using zippers located on the underside of canopy where it meets the carry handle. Detach Velcro from liner at the bottom.



- c) Unzip fabric at top of bassinet mattress and remove.



*NOTE: Please see Care Instructions (page 2) regarding fabric care.*

## LIMITED WARRANTY

*Your UPPAbaby stroller is warranted to be free from any manufacturing defects for a period of 2 years from the date of purchase under normal use and in compliance with the operating instructions.*

*This warranty extends ONLY to the original retail purchaser and is ONLY valid when supplied with proof of purchase. Please retain proof of purchase with this Limited Warranty.*

This warranty is subject to the conditions set forth by the country in which the items were purchased. Conditions may vary.

**Please note that a repair issue will NOT be covered by this warranty if:**

- The issue is caused by misuse or poor maintenance. Please refer to this instruction booklet for guidance on stroller use and maintenance.
- Damage is caused by improper installation of UPPAbaby parts and/or accessories. Please refer to this instruction booklet for guidance on stroller assembly and use.
- Damage is corrosion caused by lack of maintenance or service.
- Damage is due to general wear and tear which is the result of everyday use or negligence.
- Damage is caused by sun intensity, sweat, detergents, damp storage or frequent washings.
- Repairs or modifications are carried out by a third party.
- Stroller is purchased from an unauthorized retailer. Approved retailers are listed on our website, [www.uppababy.com](http://www.uppababy.com)
- Stroller is second hand.
- Stroller is damaged as a result of an accident, airline or freight damage.

***UPPAbaby reserves the right to determine if warranty terms and conditions have been met.***

Please contact us in the USA at 339.499.7455 or email us at [service@uppababy.com](mailto:service@uppababy.com) if you have any questions regarding warranty. In Canada, contact 5514 Km Corporation at 888.502.5514 or email at [info@5514km.ca](mailto:info@5514km.ca)

# UPPAbaby®

Our pride. Your joy.

339.499.7455  
[www.uppababy.com](http://www.uppababy.com)

UPPAbaby  
60 Sharp St. Suite 3  
Hingham, MA 02043

Model 0056  
Version 1.0

